



# GET TO KNOW

## Touch-Screen Control Panel

Here are the key features of your new panel. Keep this card near your panel for easy reference while you get the hang of your system.

**1** **ARM/DISARM** – Use to quickly arm and disarm your system.



### ARM STAY

#### Delays

30 seconds for Entry  
60 seconds before the system is armed

#### Sensors

Door & Window and  
Glass Break Sensors



### ARM AWAY

#### Delays

30 seconds for Entry  
60 seconds before the system is armed

#### Sensors

All intrusion sensors



### DISARMED

Disarm your system by entering your  
4-digit master code or user code(s)

**2** **EMERGENCY** – Press to initiate a panic alarm for the respective service requested: police, fire, or medical emergency.

**3** **HOME** – Press while using your system to navigate back to the home screen.

**4** **CAMERA** – Built-in, can take a picture every time the system is disarmed.

## Bypassing

When there are sensors in your system that you don't want to trigger an alarm (e.g. leaving a bedroom window open at night), you can set these sensors to bypass before arming your system:

- 1 On the Home screen, touch the *Press To Arm* icon and enter your master code.
- 2 To the right of the *Arming Screen*, check the boxes next to the sensors you want to bypass.
- 3 Select your desired arming mode

Exit Sounds



When you arm the system, the panel beeps as the arming timer counts down. You can silence these beeps by pressing this icon before you choose an arming type.

Entry Delay



You will have a 30-second entry delay to disarm when the system is armed and a door or window are opened. By pressing the entry delay icon before choosing an arming mode, the alarm will instead sound immediately.

Quick Exit



When the system is armed, press the Quick Exit icon for a 120-second period where you can open doors without disarming the system.

## IN THE EVENT OF AN ALARM

The siren will sound and your panel will automatically contact our monitoring station. Enter your master code to disarm the system and silence the siren.

Call to cancel a false alarm:

**800-932-3822**