


GETTING STARTED

Water and Flood Sensor

The Water and Flood Sensor is comprised of two pieces: a transmitter (larger piece) and a detector (smaller piece). This sensor is always monitored to alert you of leaks or flood conditions, even when your system is disarmed.

Follow the instructions below to get set up and protected:

- 1 Place the Water and Flood Sensor in a flood-prone area such as a basement or near appliances such as a washing machine, water heater or sump pump.
- 2 Adhere the detector (smaller piece) to the floor with the metal prongs facing down. Then adhere the transmitter (larger piece) to the wall, at least 10 inches above the floor and as far from the appliance as possible.
- 3 Once you've removed the wax backing from the adhesive, press the pieces firmly against the surface for 30 seconds.

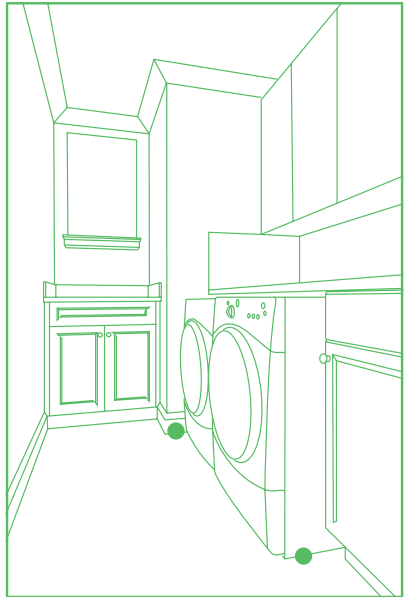

NEED HELP? WWW.FRONTPOINT.COM/HELP