

TALKING REMOTE TOUCHPAD



YOUR TALKING REMOTE TOUCHPAD

The Talking Remote Touchpad extends the accessibility and basic system operation of your Frontpoint system. The touchpad is ideal for homes with multiple levels or multiple entry/exit points.

WHERE TO PLACE

- On the wall in any convenient location
- Near any exterior doors that you frequently use
- Within 100 ft. of your primary Control Panel
- May also be kept in a drawer or on a table

TALKING REMOTE TOUCHPAD

USING YOUR TALKING REMOTE TOUCHPAD



System Status: Press to hear any system messages.

Doors + Windows Button: Press once to arm in Stay Mode – arming your Door & Window and Glass Break Sensors with a 30-second entry delay. Press twice to arm in Stay Mode with no entry delay.

Motions Button: Press to arm in Away Mode – arming your Door & Window, Glass Break and Motion Sensors.

Disarm: Press and then enter your 4-digit code to disarm the alarm system.

Emergency Buttons: Press and hold both at the same time to trigger a panic alarm.

Call Frontpoint Customer Support at (877) 602-5276 for any assistance.