


# GETTING STARTED

## Wireless Indoor Camera

Welcome to your new Wireless Indoor Camera. Follow the simple instructions below and you'll be up and running in no time.

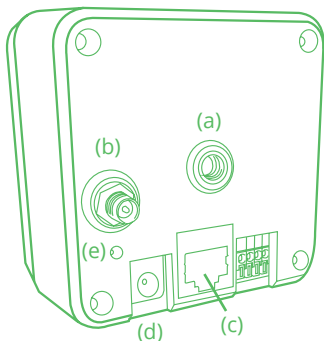

### WHAT'S INCLUDED?

Camera, Antenna, Ethernet Cord, AC Adapter, Stand, Base, Mounting Materials

.....

### CAMERA BACK:

(a) Stand (b) Antenna (c) Ethernet  
(d) AC Power (e) Reset

- 1 Attach stand (a) to camera and base, then attach antenna (b) to camera.
- 2 Log into your **MyFrontpoint.com** account and click **Video** tab.
- 3 If this is the first time you've added a camera to your system, click the **Click here to add a camera to this account** and follow the onscreen prompts to connect your camera.

If you already have a camera connected to your system, click **Video Device Settings**, then click **Add Video Device** at the bottom of the page, then follow the onscreen prompts to connect your camera.

**NEED HELP? [WWW.FRONTPOINT.COM/HELP](http://WWW.FRONTPOINT.COM/HELP)**

# GETTING STARTED

Wireless Indoor Camera


## CAMERA DIAGRAM: FRONT

**Status LED (a)** - Indicates that camera is connected (solid green), not connected (solid red) or in privacy mode (solid blue)

**Infrared LEDs (b)** - Provides night vision capabilities for camera

**Camera Lens (c)** - Captures videos in HD resolutions up to 1280x800

**WPS Button (d)** - Places camera into privacy mode. In some situations can be used for alternative setup method.

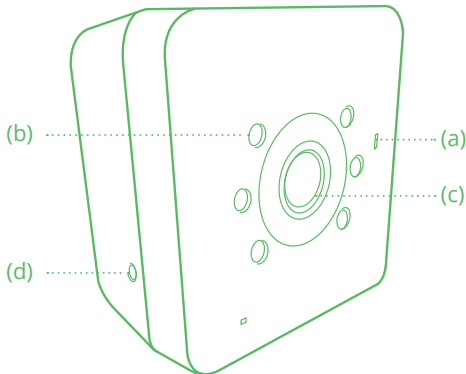

**NEED HELP? [WWW.FRONTPOINT.COM/HELP](http://WWW.FRONTPOINT.COM/HELP)**